


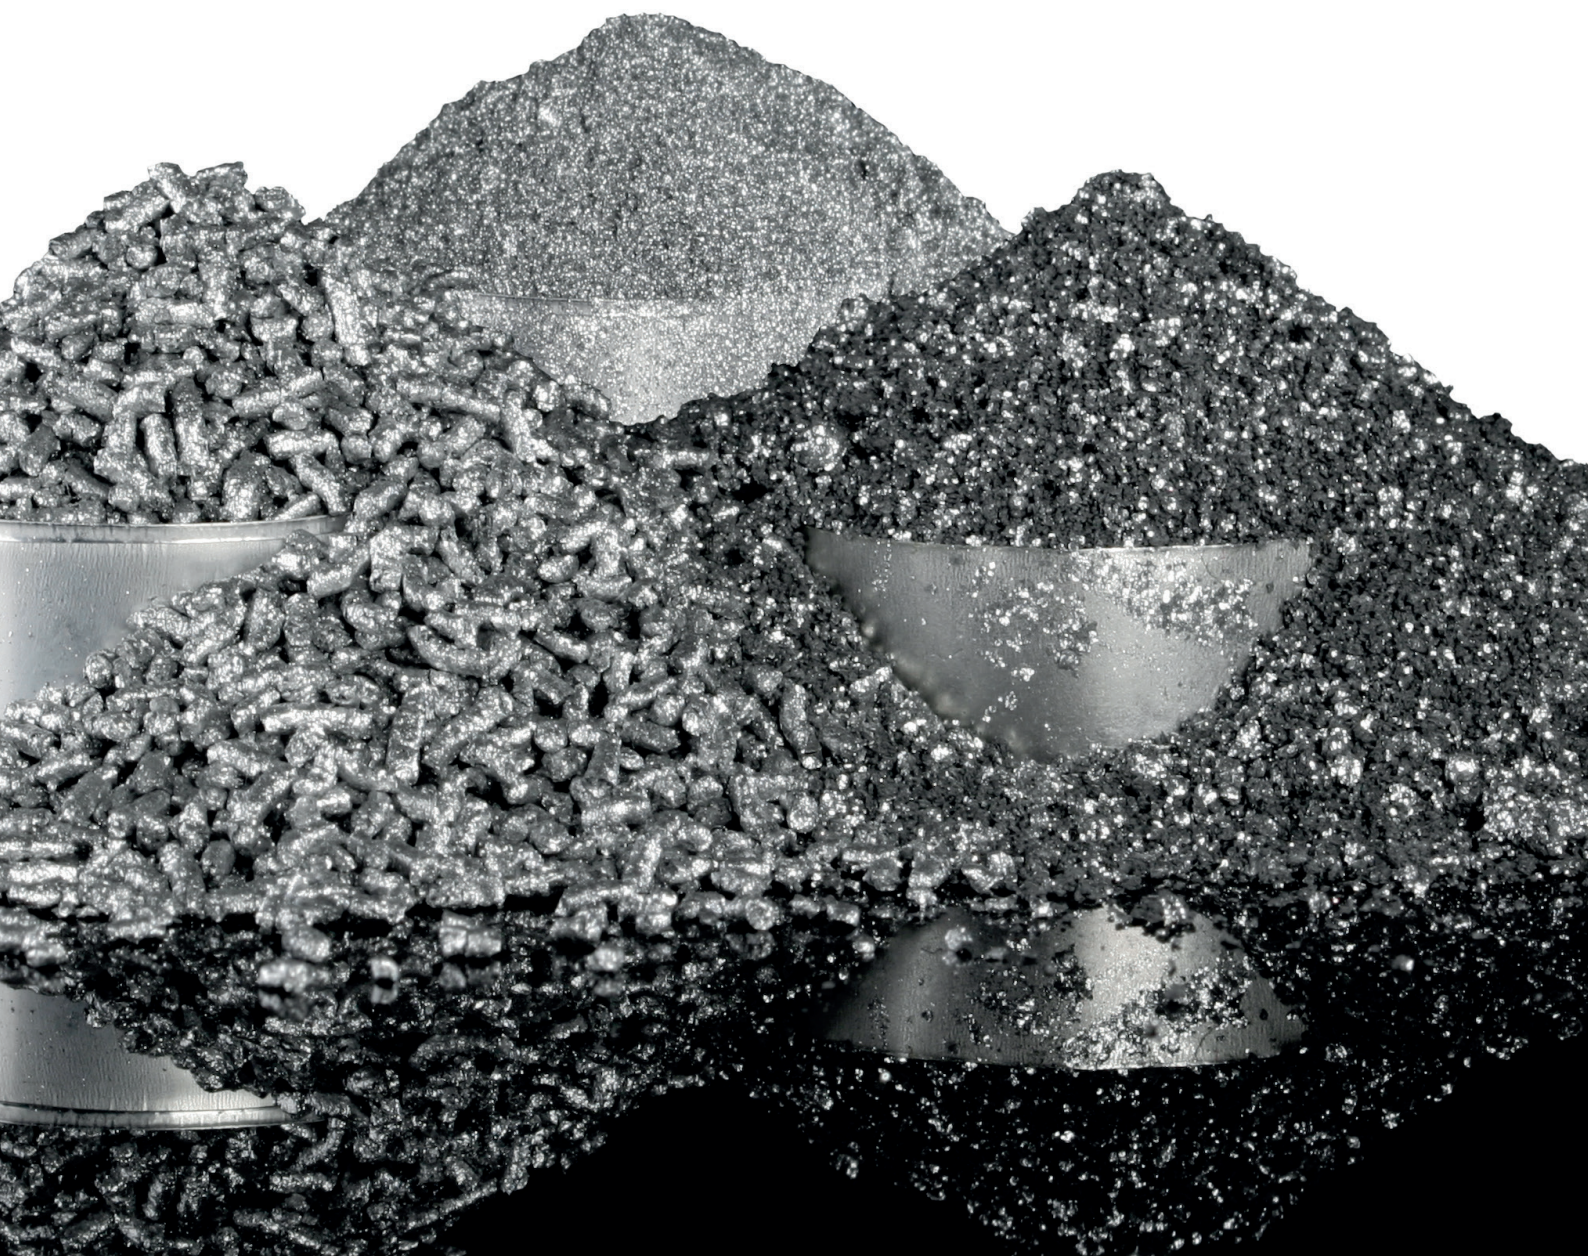

Technical Aluminiumflakes

For Building Materials and applications in Chemical Industries,
Technical Ceramics and Pyrotechnics

Performance Range

SCHLENK produces technical aluminum flakes at three locations: At headquarters in Barnsdorf (Germany), in Kamnik (Slovenia) and in Bojkovice (Czech Republic). However, our range of services goes far beyond individual products:

• Quality control

To ensure the consistently high quality of our products, all production batches of our products are subjected to extensive testing in our laboratories. This test data is of course made available to our customers as required.

• Dosing system for Aluminium Pastes

SCHLENK developed the first safe paste dosing system for the plant market. Our customers can thus benefit greatly from the wealth of experience we have gained in the production and handling of aluminum pigments over many decades. With our systems, we offer a combination of safety, metering accuracy and flexibility.

• Safety training

Aluminum pigments, powders and pastes are hazardous substances. We teach how to handle them correctly in our safety training courses.

• Technical support*

With our experienced and competent technicians we offer comprehensive technical support for the optimal use of aluminum powders and pastes.

Leistungsspektrum

SCHLENK produziert an drei Standorten Technische Aluminiumflakes: Am Hauptsitz in Barnsdorf (Deutschland), in Kamnik (Slovenien) und in Bojkovice (Tschechien). Unser Leistungsspektrum geht jedoch weit über die individuellen Produkte hinaus:

• Qualitätskontrolle

Um die konstant hohe Qualität unserer Produkte zu sichern, werden sämtliche Produktionschargen unserer Produkte in unseren Laboratorien ausführlichen Tests unterzogen. Diese Prüfdaten werden unseren Kunden selbstverständlich bei Bedarf zur Verfügung gestellt.

• Aluminiumpasten Dosiersystem

SCHLENK entwickelte das erste sichere Pasten-Dosiersystem für den Anlagenmarkt. Unsere Kunden können so ganz stark von dem Erfahrungsschatz profitieren, den wir bei der Herstellung und dem Handling von Aluminiumpigmenten in vielen Jahrzehnten gewonnen haben. Wir bieten mit unseren Anlagen eine Kombination aus Sicherheit, Dosiergenauigkeit und Flexibilität.

• Sicherheitstraining

Aluminiumpigmente, -pulver und -pasten sind Gefahrenstoffe. Wie man damit richtig umgeht, vermitteln wir in unseren Sicherheitstrainings.

• Technische Unterstützung*

Mit unseren erfahrenen und kompetenten Technikern bieten wir eine umfassende fachliche Unterstützung zum optimalen Einsatz von Aluminiumpulvern und -pasten.

* Contact: p. 16

* Kontakt: S. 16



Business Units Geschäftsfelder



Effect Pigments
Effektpigmente

Technical Aluminium Flakes
Technische Aluminiumflakes

Metallic Materials
Metallische Werkstoffe

Metal Foils
Metallfolien

Facts & Figures Zahlen & Fakten



Owner-managed, incorporated company
Family business in the fourth generation



€ 155m Turnover for 2019



72% Export rate



900 employees worldwide

- Germany 75%
- Europe 15%
- Asia 6%
- Americas 4%



More than 100 agencies worldwide
Worldwide sales offices,
application technology centers R&D



Certifications & Standards

- DIN ISO 9001:2015
- DIN ISO 14001:2015
- AEO F
- Bavarian Environmental Pact
- UN Global Compact
- CCI training company



Inhabergeführte Aktiengesellschaft
Familienunternehmen in der 4. Generation



155 Mio. Euro Umsatz 2019



72% Exportquote



900 Mitarbeitende weltweit

- Germany 75%
- Europe 15%
- Asia 6%
- Amerika 4%



Über 100 Vertretungen weltweit

Weltweite Vertriebsbüros, Anwendungstechnik und F&E



Certifications & Standards


- DIN ISO 9001:2015
- DIN ISO 14001:2015
- AEO F
- Umweltpakt Bayern
- UN Global Compact
- IHK Ausbildungsbetrieb

GENERAL INFORMATION



Schlenk TAF GmbH & Co. KG • Barnsdorfer Hauptstr. 5 • D-91154 Roth-Barnsdorf • Germany
www.schlenk.com • aluflake@schlenk.de

Milestones • Meilensteine

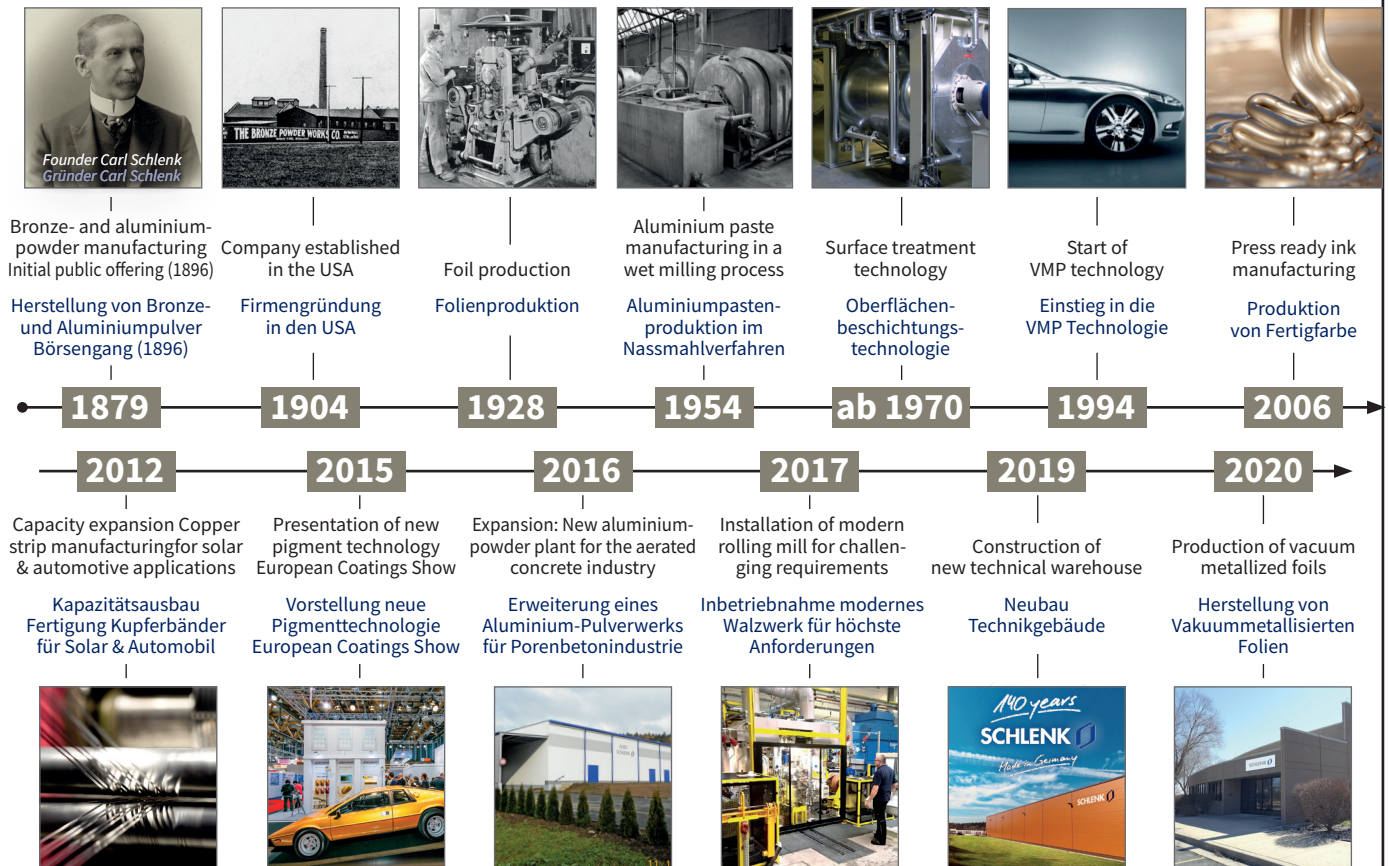

SCHLENK worldwide SCHLENK weltweit

Germany: Deutschland:

Headquarters:

Hauptsitz: Schlenk Metallic Pigments GmbH, Barnsdorf

Other locations in Germany:

Weitere Standorte in Deutschland:

Schlenk Metallfolien GmbH & Co. KG, Georgensgmünd

Schlenk Metallfolien GmbH & Co. KG, Bernlohe

Schlenk Metallic Pigments GmbH, Rothenbruck

Schlenk Metallic Pigments GmbH, Bitterfeld

Locations in China:

Standorte in China:

Schlenk Metallic Pigments Co. LTD in Shanghai, China

Schlenk ASIA LTD in Hong Kong, China

Locations in the USA:

Standorte in den USA:

Schlenk Metallic Pigments in Lawrence, Kansas

Schlenk Metallic Pigments in Ashland, MA

Other locations in Europe:

Weitere Standorte in Europa:

ALBO Schlenk in Bojkovice, Czech Republic

KAMNIK Schlenk in Kamnik, Slovenia

Schlenk PIGMENTI METALLICI SRL in Milan, Italy

Location Standort
Distribution Vertrieb

Onepager • overview • content

Autoclaved Aerated Concrete (AAC)

4 - 6



- Aluminium Powders - wettable
- Aluminium Powders - non wettable
- Calcium Carbonate Compounds
- Aluminium Flitters
- Atomized Aluminium

Plasters and Screeds

7 - 8



- Aluminium Powders - wettable
- Aluminium Powders - non wettable
- Calcium Carbonate Compounds
- Aluminium Flitters
- Atomized Aluminium

Chemical Industry

9 - 11



- Aluminium Powders - wettable
- Aluminium Powders - non wettable
- Waterborne Pastes
- Calcium Carbonate Compounds
- Aluminium Flitters
- Foil Granules

Technical Ceramics

12 - 13



- Aluminium Powders - wettable
- Aluminium Powders - non wettable
- Atomized Aluminium
- Waterborne Pastes
- Calcium Carbonate Compounds

Foundry Technology

14



- Foil Granules
- Atomized Aluminium
- Aluminium Powders for Slurries
- Aluminium Powders for Slurries - Dedusted

Pyrotechnics & Civil Explosives

15



- Aluminium Flitters
- Atomized Aluminium
- Aluminium Powders for Slurries
- Aluminium Powders for Slurries - Dedusted

Autoclaved Aerated Concrete (AAC) (p.1/3)




Aluminium Powders - wettable

Product Name	Particle Size d_{50} *1 [μm]	Particle Size d_{90} *1 [μm]	Bulk Density *2 [g/cm ³]	Recommended Application Density [kg/m ³]
7002	~ 150	~ 300	0.18 - 0.25	≥ 600
7003	~ 100	~ 240	0.16 - 0.23	≥ 600
7004	~ 85	~ 175	0.16 - 0.21	≥ 600
7008	~ 65	~ 130	0.15 - 0.19	500 - 600
7009	~ 50	~ 115	0.11 - 0.15	500 - 600
7110	~ 40	~ 80	0.11 - 0.15	400 - 500
7112	~ 35	~ 70	0.11 - 0.15	400 - 500
7114	~ 30	~ 58	0.10 - 0.14	100 - 450
7510	~ 40	~ 80	0.11 - 0.15	400 - 500
7514	~ 33	~ 60	0.15 - 0.18	100 - 450
7810	~ 40	~ 80	0.11 - 0.15	400 - 500
7814	~ 33	~ 60	0.15 - 0.18	100 - 450
77004	~ 60	~ 140	0.16 - 0.22	≥ 500
77007	~ 50	~ 120	0.14 - 0.18	≥ 500
77010	~ 25	~ 70	0.11 - 0.15	400 - 500
77012	~ 25	~ 60	0.11 - 0.15	400 - 500
77013	~ 22	~ 50	0.11 - 0.15	400 - 500
77014	~ 21	~ 48	0.11 - 0.15	100 - 450
87013	~ 25	~ 50	0.13 - 0.16	300 - 450

Test Methods: *1 AQSБ-044 *2 AQSБ-001

All powders are available in reaction-delayed versions and are available as DEG-Pastes.

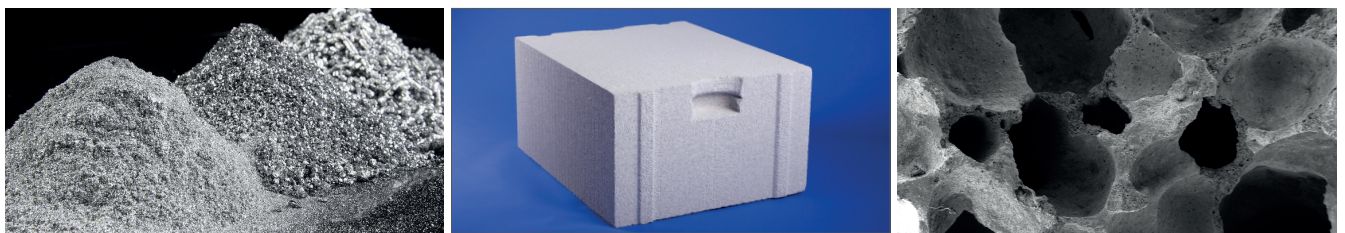

Data in this publication is based on careful investigations and is intended for information only. All information shall not be binding, shall carry no warranty as to certain ingredients, as to the fitting for a special purpose, as to the merchantability, or as to the industrial property rights of third parties. Any and all users are obliged to carry out tests on their own authority as well as to check the suitability and the danger of the respective product for a particular application. SCHLENK assumes no liability in this regard; neither to the exactness nor to the completeness of the data. We apply our General Sales Conditions to be found on www.schlenk.com. **CS 01/2021**



Autoclaved Aerated Concrete (AAC) (p.2/3)

Aluminium Powders - not wettable



Product Name	Particle Size d_{50} *1 [μm]	Particle Size d_{90} *1 [μm]	Bulk Density *2 [g/cm ³]	Recommended Application Density [kg/m ³]
UP30	~ 65	~ 150	0.10 - 0.20	≥ 500
UP40	~ 55	~ 140	0.10 - 0.20	≥ 500
76004	~ 60	~ 140	0.16 - 0.23	≥ 600
76007	~ 55	~ 125	0.15 - 0.21	≥ 500
76010	~ 25	~ 70	0.11 - 0.15	400 - 500
76013	~ 22	~ 50	0.11 - 0.15	300 - 450
76014	~ 21	~ 48	0.11 - 0.16	100 - 450
86013	~ 22	~ 43	0.13 - 0.18	300 - 450

Waterborne Pastes

Product Name	Particle Size d_{50} *1 [μm]	Particle Size d_{90} *1 [μm]	Recommended Application Density [kg/m ³]
Aquapor 300 series	~ 70	~ 150	≥ 600
Aquapor 400 series	~ 60	~ 130	≥ 600
Aquapor 1000 series	~ 35	~ 100	500 - 600
Aquapor 3000 series	~ 25	~ 85	500 - 600
Aquapor 7000 series	~ 18	~ 50	400 - 500
Aquapor 9000 series	~ 13	~ 35	100 - 400
Aquapor 4204	~ 60	~ 130	≥ 600
Aquapor 4207	~ 55	~ 115	≥ 600
Aquapor 4209	~ 38	~ 95	≥ 500
Aquapor 4210	~ 30	~ 75	400 - 500
Aquapor 4213/W	~ 22	~ 50	350 - 450

Test Methods: *1 AQS-B-044 *2 AQS-B-001

All powders are available in reaction-delayed versions and are available as DEG-Pastes.
 All pastes are available with different solid content and different reaction delay.

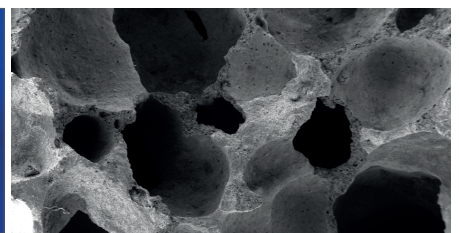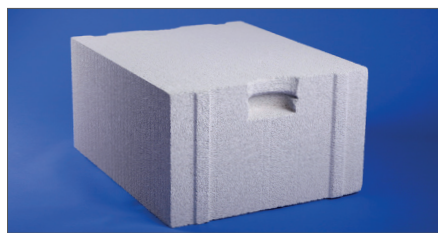

Data in this publication is based on careful investigations and is intended for information only. All information shall not be binding, shall carry no warranty as to certain ingredients, as to the fitting for a special purpose, as to the merchantability, or as to the industrial property rights of third parties. Any and all users are obliged to carry out tests on their own authority as well as to check the suitability and the danger of the respective product for a particular application. SCHLENK assumes no liability in this regard; neither to the exactness nor to the completeness of the data. We apply our General Sales Conditions to be found on www.schlenk.com. **CS 01/2021**

Autoclaved Aerated Concrete (AAC) (p.3/3)



Solventborne Pastes (Diethylene Glycol) „stabilized“



Product Name	Particle Size d ₅₀ ^{*1} [μm]	Particle Size d ₉₀ ^{*1} [μm]	Recommended Application Density [kg/m ³]
DEG/350 series	~ 70	~ 150	≥ 600
DEG/450 series	~ 60	~ 130	≥ 600
DEG/1500 series	~ 35	~ 100	500 - 600
DEG/3500 series	~ 25	~ 85	500 - 600
DEG/7500 series	~ 18	~ 50	400 - 500
DEG/9500 series	~ 13	~ 35	100 - 400
DEG/4504	~ 60	~ 130	≥ 600
DEG/4507	~ 55	~ 115	≥ 600
DEG/4509	~ 38	~ 95	≥ 500
DEG/4510	~ 30	~ 75	400 - 500
DEG/4513	~ 22	~ 50	350 - 450

Solventborne Pastes (Diethylene Glycol) from Wetable Powder „not stabilized“

Product Name	Particle Size d ₅₀ ^{*1} [μm]	Particle Size d ₉₀ ^{*1} [μm]	Recommended Application Density [kg/m ³]
DEG/7003/80	~ 70	~ 150	≥ 600
DEG/7004/77	~ 60	~ 130	≥ 600
DEG/7009	~ 35	~ 100	500 - 600
DEG/7112	~ 25	~ 85	400 - 500
DEG/7114	~ 18	~ 50	100 - 450
DEG/7814	~ 18	~ 50	100 - 450
DEG/77013	~ 25	~ 85	400 - 500
DEG/77014	~ 18	~ 50	100 - 450
DEG/87116/65	~ 12	~ 32	100 - 200

Test Method: ^{*1} AQS-B-044

All pastes are available with different solid content and different reaction delay.

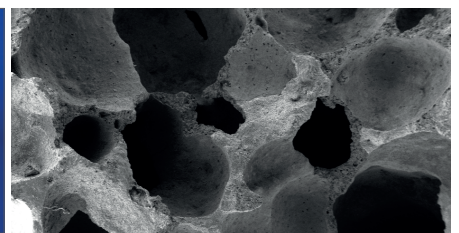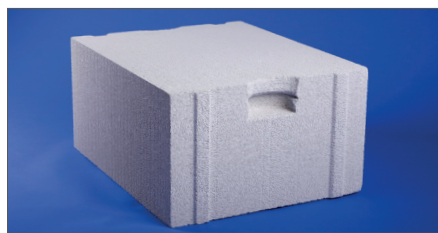

Data in this publication is based on careful investigations and is intended for information only. All information shall not be binding, shall carry no warranty as to certain ingredients, as to the fitting for a special purpose, as to the merchantability, or as to the industrial property rights of third parties. Any and all users are obliged to carry out tests on their own authority as well as to check the suitability and the danger of the respective product for a particular application. SCHLENK assumes no liability in this regard; neither to the exactness nor to the completeness of the data. We apply our General Sales Conditions to be found on www.schlenk.com. **CS 01/2021**

Plasters and Screeds (p.1/2)



The products for the application in plasters, renders and screeds are primarily used for reducing and avoiding shrinkage cracks (due to the expansion because of pore building). Additionally they are applied in formulations for restauration - and insulating renders to create a target pore structure.

Aluminium Powders - wettable


Product Name	Particle Size d_{50} ^{*1} [μm]	Particle Size d_{90} ^{*1} [μm]	Bulk Density ^{*2} [g/cm ³]
7002	~ 150	~ 300	0.18 - 0.25
7004	~ 85	~ 175	0.16 - 0.21
7008	~ 65	~ 130	0.15 - 0.19
7009	~ 50	~ 115	0.11 - 0.15
7110	~ 40	~ 80	0.11 - 0.15
7114	~ 30	~ 58	0.10 - 0.14
77004	~ 60	~ 140	0.16 - 0.22
77007	~ 50	~ 120	0.14 - 0.18
77010	~ 25	~ 70	0.11 - 0.15
77012	~ 25	~ 60	0.11 - 0.15
77013	~ 22	~ 50	0.11 - 0.15
77014	~ 21	~ 48	0.11 - 0.15

Aluminium Powders - not wettable

Product Name	Particle Size d_{50} ^{*1} [μm]	Particle Size d_{90} ^{*1} [μm]	Bulk Density ^{*2} [g/cm ³]
UP30	~ 65	~ 150	0.10 - 0.20
UP40	~ 55	~ 140	0.10 - 0.20
76004	~ 60	~ 140	0.16 - 0.23
76007	~ 55	~ 125	0.15 - 0.21
76010	~ 25	~ 70	0.11 - 0.15
76013	~ 22	~ 50	0.11 - 0.15
76014	~ 21	~ 48	0.11 - 0.16

Test Methods: ^{*1} AQSБ-044 ^{*2} AQSБ-001

All powders are available in reaction-delayed versions and are available as DEG-Pastes.

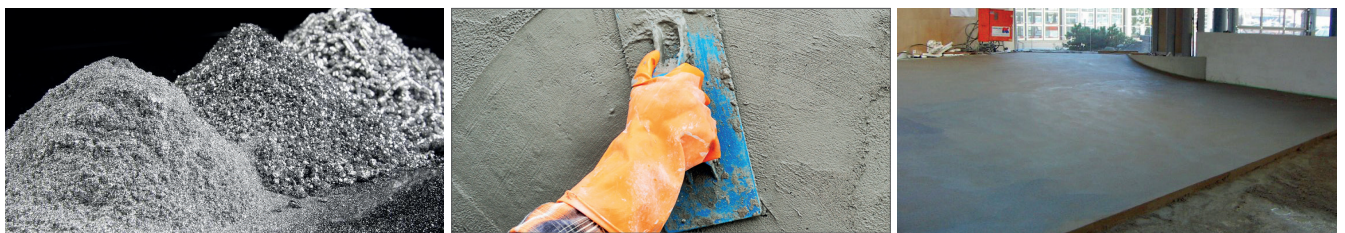

Data in this publication is based on careful investigations and is intended for information only. All information shall not be binding, shall carry no warranty as to certain ingredients, as to the fitting for a special purpose, as to the merchantability, or as to the industrial property rights of third parties. Any and all users are obliged to carry out tests on their own authority as well as to check the suitability and the danger of the respective product for a particular application. SCHLENK assumes no liability in this regard; neither to the exactness nor to the completeness of the data. We apply our General Sales Conditions to be found on www.schlenk.com. **CS 01/2021**

Plasters and Screeds (p.2/2)



Calcium Carbonate Compounds

Product Name	Aluminium Powder x [%]	Particle Size d ₅₀ * ¹ [µm]	Blaine/ Water Coverage * ⁵ [g/cm ³]
CaCO ₃ /7004/x	10/20	~ 85	min. 7 000
CaCO ₃ /7009/x	10/20	~ 75	min. 13 000
CaCO ₃ /7114/x	10/20	~ 28	min. 22 000
CaCO ₃ /UP30/x	10/20	~ 70	min. 3 500
CaCO ₃ /290/x	10	~ 11	min. 35 000
CaCO ₃ /290R/x	10	~ 11	min. 35 000
CaCO ₃ /U290XR/x	10	~ 11	min. 35 000
CaCO ₃ /260R/x	10	~ 24	min. 18 000
CaCO ₃ /260XR/x	10	~ 24	min. 18 000
CaCO ₃ /U320R/x	10	~ 54	min. 8 000

Other compounds are possible.


Aluminium Flitters

Product Name	Aceton Extract * ³ [%]	Active Metal Content * ⁴ [%]	Bulk Density * ² [g/cm ³]	Particle Size Range [µm]
0/150	max. 0.6	min. 92	~ 0.40	0 - 150
0/300	max. 0.6	min. 92	~ 0.40	0 - 300
150/300	max. 0.6	min. 92	~ 0.40	150 - 300
300/600	max. 0.5	min. 92	~ 0.40	300 - 600
600/1000	max. 0.5	min. 92	~ 0.40	600 - 1000

Atomized Aluminium

Product Name	Active Metal Content * ⁴ [%]	Particle Size d ₅₀ * ¹ [µm]	Bulk Density * ² [g/cm ³]
Rogal Aluminium 4/34	min. 99.7	~ 21	~ 1.0
Rogal Aluminium 0/63	min. 99.7	~ 35	~ 1.0
Rogal Aluminium 32/75	min. 99.7	~ 40	~ 1.0
Rogal Aluminium 75/2000	min. 99.7	~ 100	~ 1.0

Test Methods: *¹ AQS-044 *² AQS-001 *³ AQS-041 *⁴ AQS-012

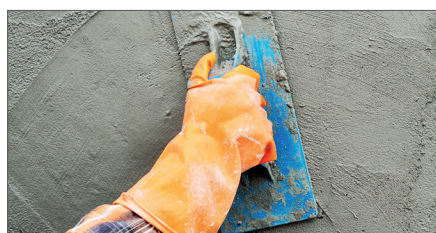

Data in this publication is based on careful investigations and is intended for information only. All information shall not be binding, shall carry no warranty as to certain ingredients, as to the fitting for a special purpose, as to the merchantability, or as to the industrial property rights of third parties. Any and all users are obliged to carry out tests on their own authority as well as to check the suitability and the danger of the respective product for a particular application. SCHLENK assumes no liability in this regard; neither to the exactness nor to the completeness of the data. We apply our General Sales Conditions to be found on www.schlenk.com. **CS 01/2021**

Chemical Industry (p.1/3)



Aluminium Powders - wettable

Product Name	Particle Size d_{50} *1 [μm]	Particle Size d_{90} *1 [μm]	Bulk Density *2 [g/cm ³]
7002	~ 150	~ 300	0.18 - 0.25
7004	~ 85	~ 175	0.16 - 0.21
7009	~ 50	~ 115	0.11 - 0.15
7114	~ 30	~ 58	0.10 - 0.14
77007	~ 50	~ 120	0.14 - 0.18
77010	~ 25	~ 70	0.11 - 0.15
77012	~ 25	~ 60	0.11 - 0.15
77013	~ 22	~ 50	0.11 - 0.15

Aluminium Powders - not wettable


Product Name	Particle Size d_{50} *1 [μm]	Particle Size d_{90} *1 [μm]	Bulk Density *2 [g/cm ³]
UP30	~ 65	~ 150	0.10 - 0.20
UP40	~ 55	~ 140	0.10 - 0.20
76004	~ 60	~ 140	0.16 - 0.23
76007	~ 55	~ 125	0.15 - 0.21
76010	~ 25	~ 70	0.11 - 0.15
76013	~ 22	~ 50	0.11 - 0.15

Waterborne Pastes

Product Name	Particle Size d_{50} *1 [μm]	Particle Size d_{90} *1 [μm]
Aquapor 300 series	~ 70	~ 150
Aquapor 400 series	~ 60	~ 130
Aquapor 1000 series	~ 35	~ 100
Aquapor 3000 series	~ 25	~ 85
Aquapor 7000 series	~ 18	~ 50
Aquapor 9000 series	~ 13	~ 35

Test Methods: *1 AQS-B-044 *2 AQS-B-001

All powders are available in reaction-delayed versions and are available as DEG-Pastes.

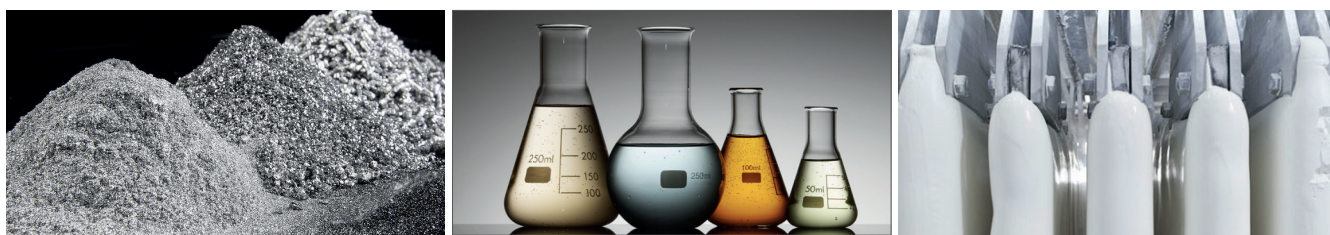

Data in this publication is based on careful investigations and is intended for information only. All information shall not be binding, shall carry no warranty as to certain ingredients, as to the fitting for a special purpose, as to the merchantability, or as to the industrial property rights of third parties. Any and all users are obliged to carry out tests on their own authority as well as to check the suitability and the danger of the respective product for a particular application. SCHLENK assumes no liability in this regard; neither to the exactness nor to the completeness of the data. We apply our General Sales Conditions to be found on www.schlenk.com. **CS 01/2021**

Chemical Industry (p.2/3)



Calcium Carbonate Compounds

Product Name	Aluminium Powder x [%]	Particle Size d ₅₀ *1 [µm]	Blaine/ Water Coverage *5[g/cm³]
CaCO₃/7004/x	10/20	~ 85	min. 7 000
CaCO₃/7009/x	10/20	~ 75	min. 13 000
CaCO₃/7114/x	10/20	~ 28	min. 22 000
CaCO₃/UP30/x	10/20	~ 70	min. 3 500
CaCO₃/290/x	10	~ 11	min. 35 000
CaCO₃/290R/x	10	~ 11	min. 35 000
CaCO₃/U290XR/x	10	~ 11	min. 35 000
CaCO₃/260R/x	10	~ 24	min. 18 000
CaCO₃/260XR/x	10	~ 24	min. 18 000
CaCO₃/U320R/x	10	~ 54	min. 8 000

Other compounds are possible.


Aluminium Flitters

Product Name	Aceton Extract *3 [%]	Active Metal Content *4 [%]	Bulk Density *2 [g/cm³]	Particle Size Range [µm]
0/150	max. 0.6	min. 92	~ 0.40	0 - 150
0/300	max. 0.6	min. 92	~ 0.40	0 - 300
150/300	max. 0.6	min. 92	~ 0.40	150 - 300
300/600	max. 0.5	min. 92	~ 0.40	300 - 600
600/1000	max. 0.5	min. 92	~ 0.40	600 - 1000

Foil Granules

Product Name	Active Metal Content *4 [%]	Bulk Density *2 [g/cm³]	Particle Size Range [µm]
0 / 160	~ 96	~ 1.0	0 - 106
106 / 160	~ 96	~ 1.0	106 - 160
160 / 315	~ 96	~ 1.0	160 - 315
315 / 630	~ 96	~ 1.0	315 - 630
630 / 1000	~ 96	~ 1.0	630 - 1000

Test Methods: *1 AQS-B-044 *2 AQS-B-001 *4 AQS-B-012 *5 AQS-B-014

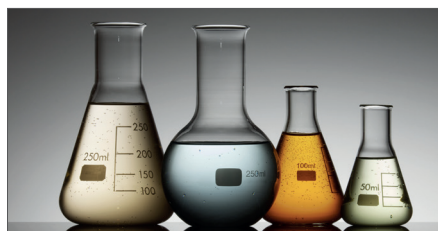

Data in this publication is based on careful investigations and is intended for information only. All information shall not be binding, shall carry no warranty as to certain ingredients, as to the fitting for a special purpose, as to the merchantability, or as to the industrial property rights of third parties. Any and all users are obliged to carry out tests on their own authority as well as to check the suitability and the danger of the respective product for a particular application. SCHLENK assumes no liability in this regard; neither to the exactness nor to the completeness of the data. We apply our General Sales Conditions to be found on www.schlenk.com. **CS 01/2021**

Chemical Industry (p.3/3)



Atomized Aluminium

Product Name	Active Metal Content *4 [%]	Particle Size d ₅₀ *1 [µm]	Bulk Density *2 [g/cm³]
Rogal Aluminium 4/34	min. 99.7	~ 21	~ 1.0
Rogal Aluminium 0/63	min. 99.7	~ 35	~ 1.0
Rogal Aluminium 32/75	min. 99.7	~ 40	~ 1.0
Rogal Aluminium 75/2000	min. 99.7	~ 100	~ 1.0


Aluminium Powders for Slurries

Product Name	Water Coverage *5 [g/cm³]	Screen Analysis *6 >71 µm [%]	Screen Analysis *6 >45 µm [%]	Fat Content *7 [%]
SL/0770	min. 18 000	max. 1	max. 7	2 - 3
SL/0970	min. 20 000	max. 0.5	max. 3	2 - 3
SL/2770	min. 18 000	max. 1	max. 7	2 - 3
SL/2970	min. 20 000	max. 0.5	max. 3	2 - 3

Aluminium Powders for Slurries - Dedusted

Product Name	Water Coverage *5 [g/cm³]	Screen Analysis *6 >71 µm [%]	Screen Analysis *6 >45 µm [%]	Fat Content *7 [%]
SL/4930 DD	min. 20 000	max. 0.5	max. 3	2 - 3
SL/4970 DD	min. 20 000	max. 0.5	max. 3	2 - 3
SL/41130 DD	min. 20 000		max. 1	2 - 3

Test Methods: *1 AQSБ-044 *2 AQSБ-001 *4 AQSБ-012 *5 AQSБ-014 *6 AQSБ-003 *7 AQSБ-040

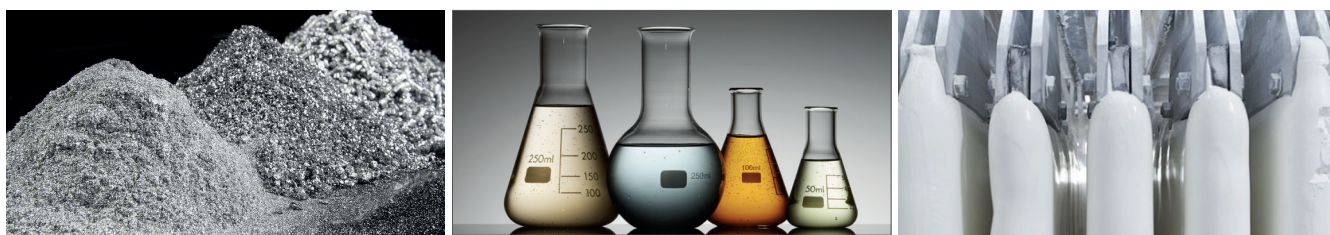

Data in this publication is based on careful investigations and is intended for information only. All information shall not be binding, shall carry no warranty as to certain ingredients, as to the fitting for a special purpose, as to the merchantability, or as to the industrial property rights of third parties. Any and all users are obliged to carry out tests on their own authority as well as to check the suitability and the danger of the respective product for a particular application. SCHLENK assumes no liability in this regard; neither to the exactness nor to the completeness of the data. We apply our General Sales Conditions to be found on www.schlenk.com. CS 01/2021

Technical Ceramics (p.1/2)



Aluminium Powders - wettable

Product Name	Particle Size d ₅₀ *1 [µm]	Particle Size d ₉₀ *1 [µm]	Bulk Density *2 [g/cm³]	Recommended Application Density [kg/m³]
7002	~ 150	~ 300	0.18 - 0.25	≥ 600
7004	~ 85	~ 175	0.16 - 0.21	≥ 600
7009	~ 50	~ 115	0.11 - 0.15	500 - 600
7114	~ 30	~ 58	0.10 - 0.14	≤ 450
77007	~ 50	~ 120	0.14 - 0.18	≥ 500
77010	~ 25	~ 70	0.11 - 0.15	400 - 500
77012	~ 25	~ 60	0.11 - 0.15	400 - 500
77013	~ 22	~ 50	0.11 - 0.15	400 - 500

Aluminium Powders - not wettable

Product Name	Particle Size d ₅₀ *1 [µm]	Particle Size d ₉₀ *1 [µm]	Bulk Density *2 [g/cm³]	Recommended Application Density [kg/m³]
76004	~ 60	~ 140	0.16 - 0.23	≥ 600
76007	~ 55	~ 125	0.15 - 0.21	≥ 500
76010	~ 25	~ 70	0.11 - 0.15	400 - 500
76013	~ 22	~ 50	0.11 - 0.15	≤ 450
UP30	~ 65	~ 150	0.10 - 0.20	≥ 500
UP40	~ 55	~ 140	0.10 - 0.20	≥ 500

Atomized Aluminium

Product Name	Active Metal Content *4 [%]	Particle Size d ₉₀ *1 [µm]	Blaine/ Water Coverage *5 [g/cm³]
Rogal Aluminium 4/34	min. 99.7	~ 21	~ 1.0
Rogal Aluminium 0/63	min. 99.7	~ 35	~ 1.0
Rogal Aluminium 32/75	min. 99.7	~ 40	~ 1.0
Rogal Aluminium 75/2000	min. 99.7	~ 100	~ 1.0

Test Methods: *1 AQS-044 *2 AQS-001 *4 AQS-012 *5 AQS-014
 All powders are available in reaction-delayed versions and are available as DEG-Pastes.



Data in this publication is based on careful investigations and is intended for information only. All information shall not be binding, shall carry no warranty as to certain ingredients, as to the fitting for a special purpose, as to the merchantability, or as to the industrial property rights of third parties. Any and all users are obliged to carry out tests on their own authority as well as to check the suitability and the danger of the respective product for a particular application. SCHLENK assumes no liability in this regard; neither to the exactness nor to the completeness of the data. We apply our General Sales Conditions to be found on www.schlenk.com. **CS 01/2021**

Technical Ceramics (p.2/2)



Waterborne Pastes

Product Name	Particle Size d_{50} *1 [μm]	Particle Size d_{90} *1 [μm]	Recommended Application Density [kg/m^3]
Aquapor 300 series	~ 70	~ 150	≥ 600
Aquapor 400 series	~ 60	~ 130	≥ 600
Aquapor 1000 series	~ 35	~ 100	500 - 600
Aquapor 3000 series	~ 25	~ 85	500 - 600
Aquapor 7000 series	~ 18	~ 50	400 - 500
Aquapor 9000 series	~ 13	~ 35	≤ 400


Calcium Carbonate Compounds

Product Name	Aluminium Powder x [%]	Particle Size d_{90} *1 [μm]	Blaine/ Water Coverage *5 [g/cm^3]
CaCO ₃ /7004/x	10/20	~ 85	min. 7 000
CaCO ₃ /7009/x	10/20	~ 75	min. 13 000
CaCO ₃ /7114/x	10/20	~ 28	min. 22 000
CaCO ₃ /UP30/x	10/20	~ 70	min. 3 500
CaCO ₃ /290/x	10	~ 11	min. 35 000
CaCO ₃ /290R/x	10	~ 11	min. 35 000
CaCO ₃ /U290XR/x	10	~ 11	min. 35 000
CaCO ₃ /260R/x	10	~ 24	min. 18 000
CaCO ₃ /260XR/x	10	~ 24	min. 18 000
CaCO ₃ /U320R/x	10	~ 54	min. 8 000

Other compounds are possible.

Test Methods: *1 AQS-044 *2 AQS-001 *5 AQS-014

All powders are available in reaction-delayed versions and are available as DEG-Pastes.

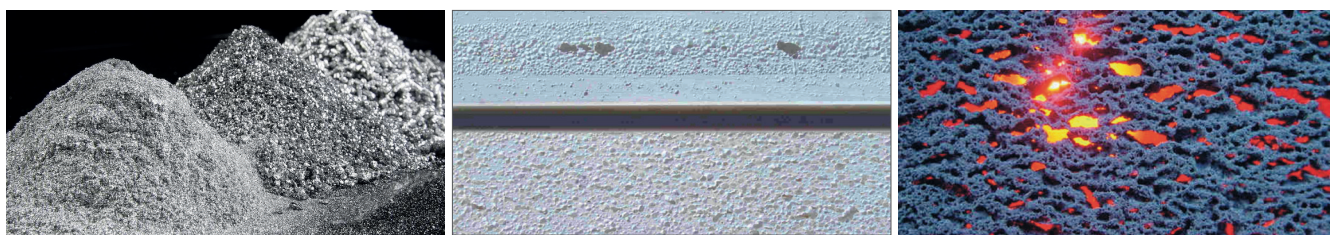

Data in this publication is based on careful investigations and is intended for information only. All information shall not be binding, shall carry no warranty as to certain ingredients, as to the fitting for a special purpose, as to the merchantability, or as to the industrial property rights of third parties. Any and all users are obliged to carry out tests on their own authority as well as to check the suitability and the danger of the respective product for a particular application. SCHLENK assumes no liability in this regard; neither to the exactness nor to the completeness of the data. We apply our General Sales Conditions to be found on www.schlenk.com. CS 01/2021

Foundry Technology (p.1/1)



Foil Granules

Product Name	Active Metal Content *4 [%]	Bulk Density *2 [g/cm³]	Particle Size Range [µm]
0 / 160	~ 96	~ 1.0	0 - 106
106 / 160	~ 96	~ 1.0	106 - 160
160 / 315	~ 96	~ 1.0	160 - 315
315 / 630	~ 96	~ 1.0	315 - 630
630 / 1000	~ 96	~ 1.0	630 - 1000

Atomized Aluminium

Product Name	Active Metal Content *4 [%]	Bulk Density *2 [g/cm³]	Particle Size d ₅₀ *1 [µm]
Rogal Aluminium 4/34	min. 99.7	~ 1.0	~ 21
Rogal Aluminium 0/63	min. 99.7	~ 1.0	~ 35
Rogal Aluminium 32/75	min. 99.7	~ 1.0	~ 40
Rogal Aluminium 75/2000	min. 99.7	~ 1.0	~ 100

Aluminium Powders for Slurries

Product Name	Water Coverage *5 [g/cm³]	Screen Analysis *6 >71 µm [%]	Screen Analysis *6 >45 µm [%]	Fat Content *7 [%]
SL/0770	min. 18 000	max. 1	max. 7	2 - 3
SL/0970	min. 20 000	max. 0.5	max. 3	2 - 3
SL/2770	min. 18 000	max. 1	max. 7	2 - 3
SL/2970	min. 20 000	max. 0.5	max. 3	2 - 3

Aluminium Powders for Slurries - Dedusted

Product Name	Water Coverage *5 [g/cm³]	Screen Analysis *6 >71 µm [%]	Screen Analysis *6 >45 µm [%]	Fat Content *7 [%]
SL/4930 DD	min. 20 000	max. 0.5	max. 3	2 - 3
SL/4970 DD	min. 20 000	max. 0.5	max. 3	2 - 3
SL/41130 DD	min. 20 000		max. 1	2 - 3

Test Methods: *1 AQSB-044 *2 AQSB-001 *3 AQSB-041 *4 AQSB-012 *5 AQSB-014 *6 AQSB-003 *7 AQSB-040



Data in this publication is based on careful investigations and is intended for information only. All information shall not be binding, shall carry no warranty as to certain ingredients, as to the fitting for a special purpose, as to the merchantability, or as to the industrial property rights of third parties. Any and all users are obliged to carry out tests on their own authority as well as to check the suitability and the danger of the respective product for a particular application. SCHLENK assumes no liability in this regard; neither to the exactness nor to the completeness of the data. We apply our General Sales Conditions to be found on www.schlenk.com. **CS 01/2021**

Pyrotechnics & Civil Explosives (p.1/1)



Aluminium Flitters

Product Name	Aceton Extract *3 [%]	Active Metal Content *4 [%]	Bulk Density *2 [%]	Particle Size Range [µm]
0/150	max. 0.6	min. 92	~ 0.40	0 - 150
0/300	max. 0.6	min. 92	~ 0.40	0 - 300
150/300	max. 0.6	min. 92	~ 0.40	150 - 300
300/600	max. 0.5	min. 92	~ 0.40	300 - 600
600/1000	max. 0.5	min. 92	~ 0.40	600 - 1000

Atomized Aluminium

Product Name	Active Metal Content *4 [%]	Bulk Density *2 [g/cm³]	Particle Size d ₅₀ *1 [µm]
Rogal Aluminium 4/34	min. 99.7	~ 1.0	~ 21
Rogal Aluminium 0/63	min. 99.7	~ 1.0	~ 35
Rogal Aluminium 32/75	min. 99.7	~ 1.0	~ 40
Rogal Aluminium 75/2000	min. 99.7	~ 1.0	~ 100

Aluminium Powders for Slurries

Product Name	Water Coverage *5 [g/cm³]	Screen Analysis *6 >71 µm [%]	Screen Analysis *6 >45 µm [%]	Fat Content *7 [%]
SL/0770	min. 18 000	max. 1	max. 7	2 - 3
SL/0970	min. 20 000	max. 0.5	max. 3	2 - 3
SL/2770	min. 18 000	max. 1	max. 7	2 - 3
SL/2970	min. 20 000	max. 0.5	max. 3	2 - 3

Aluminium Powders for Slurries - Dedusted

Product Name	Water Coverage *5 [g/cm³]	Screen Analysis *6 >71 µm [%]	Screen Analysis *6 >45 µm [%]	Fat Content *7 [%]
SL/4930 DD	min. 20 000	max. 0.5	max. 3	2 - 3
SL/4970 DD	min. 20 000	max. 0.5	max. 3	2 - 3
SL/41130 DD	min. 20 000		max. 1	2 - 3

Test Methods: *1 AQS-044 *2 AQS-001 *3 AQS-041 *4 AQS-012 *5 AQS-014 *6 AQS-003 *7 AQS-040



Data in this publication is based on careful investigations and is intended for information only. All information shall not be binding, shall carry no warranty as to certain ingredients, as to the fitting for a special purpose, as to the merchantability, or as to the industrial property rights of third parties. Any and all users are obliged to carry out tests on their own authority as well as to check the suitability and the danger of the respective product for a particular application. SCHLENK assumes no liability in this regard; neither to the exactness nor to the completeness of the data. We apply our General Sales Conditions to be found on www.schlenk.com. **CS 01/2021**

Global Director Production and Planning BU TAF



Uğur Çelikkayali
Tel. +49 9171 808 - 238
Mob. +49 170 638 5762

Sales Department



Andreas Becker
Tel. +49 9171 808 - 262
Mob. +49 160 709 6598

Technical support/Application Service



Dr. Gerhard Spicker
Tel. +49 9171 808 - 350
Mob. +49 151 1134 7805



Stephan Krebs
Tel. +49 9171 808 - 315
Mob. +49 170 933 4082



Irina Safonova
Tel. +371 2000 5721



Dr. Sebastian Bergold
Tel. +49 9171 808 - 586
Mob. +49 151 7440 8913

CS 11/2021



SCHLENK in Barnsdorf



Albo SCHLENK in Bojkovice



SCHLENK in Kamnik